

SAFETY FIRST:

- Read the user manual carefully and make sure you understand it before using this product. And after reading it, keep it for future reference.
- Improper use of this product may result in personal injury.
- The spring cup edges and the rewind springs are sharp!
- When using the product; avoid rough handling, wear protective gloves and eye protection.
- In the area where you will use the winder, remove any obstacles that may prevent you from working comfortably and disturb your balance. No one should be in your work area, keep bystanders and pets away. Always stand firm and balanced, always be careful and do not use the tool when tired or ill.

WARNING: BASEH assumes no responsibility for any damage caused by misuse beyond the normal use described in this product manual. The descriptions and illustrations in this manual are not binding. BASEH reserves the right to modify this product and manual..



BOX CONTENTS:

- * Spring Winder (Assembled) With Large Cup and Washer
- * Medium size Cup
- * Medium size Washer
- * Small size Cup
- * Small size Washer
- * Lock Pin
- * Instruction manual

BASEH Spring Winder: Used for securely winding and inserting various sizes and diameters of rewind springs that have come loose from their place into the starter cover. Supplied with 3 size cup and washer sets.

Usage of Rewind Spring Winder: A large cup-washer set is already installed on the strap winder. If the strap to be wound is of smaller size, a medium or small size cup-washer set should be installed.



Replacing the Cup and Washer: Squeeze the winder in your hand between the upper and lower shafts. Align the outer casing and inner casing fixing holes according to the guide line and insert the lock pin.



First remove the washer on the winder. It is the right pass.



Then remove the cup on the winder. It is the right pass too.



Find the appropriate cup-washer set according to the size of the place where the rewind spring is to be installed.



Pass-fit first the cup and then the washer of the cup-washer set of the size you want to use



After the cup-washer set is installed, remove the lock pin. Ready for use.



Usage of Winder: The upper winding shaft should be in the deep groove. The spring to be wound can be wound on a suitable table.



Insert the inner end of the discharged spring through the slot in the center of the winder. Make sure that the other remaining end is on the table outside the outer slot.



Secure the rewind spring winder on the table with one hand. Wind the spring into the cup by turning the upper shaft to the right or left, depending on where the spring will be used.



When the winding is finished, pull the upper winding shaft out of the deep groove and insert it into the upper small groove. This will free the core of the spring from the groove.



As soon as you tighten the upper and lower shafts, the rewind spring will be released from the cup. To do this, first put the spring into the cover or rewind spring cup where you will place it.



Then carefully squeeze the winder shafts in your hand and place them where the rewind spring will come out of the winder and work.



The wrapped rewind spring is ready for use inside the starter cover.

You can get information and assistance about the assembly and use of the RSW rewind spring winder from the dealer you purchased it from.

By opening the QR code link on the front page about the assembly and use of the product, watching the video on the youtube BASEH channel will help you to assemble more easily and use it more efficiently.

Dexterity will come with experience as you use it.

Thanks for preferring BASEH products and we wish you convenience in your works.